



onn™



# Universal Remote

## Model: ONB13AV004

---

# PRODUCT GUIDE

# Table of Contents

Introduction .....	2
Battery Installation.....	3
Care and Maintenance .....	3
Button Functions.....	4
Programming Your Remote .....	6
Direct Code Entry .....	6
Auto Code Search.....	8
Controlling Combo Devices .....	9
Master Volume Feature .....	10
Reset to Factory Settings.....	11
Troubleshooting.....	12
FCC Statement.....	13
Remote Code Section.....	14

Congratulations on your purchase of the ONN Universal Remote. This remote is capable of operating thousands of audio/video devices including TVs, DVD players, cable, satellite receivers, and more!

**IMPORTANT:  
SAVE THIS MANUAL AND CODE LIST FOR  
FUTURE REFERENCE**

## QR Code

Scan the QR code to view our helpful demonstration video for programming your ONN remote.



Scan this to view remote setup video  
Mira a ver el video de instalación remota  
<http://www.myonnremote.com>

## Battery Installation

Your universal remote requires two (2) AAA Alkaline batteries (not included).

### To Install the Batteries:

1. Remove the battery compartment cover by sliding the cover down.
2. Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment, then insert two (2) AAA Alkaline batteries. Be sure to use fresh batteries.
3. Slide the battery compartment cover back into place.

**Note:** *If your remote stops operating properly, replace the batteries with new ones. The remote will retain the codes you have programmed for up to 10 minutes after the batteries are removed.*

### Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

### Care and Maintenance

- Keep the remote away from moisture. If it gets wet, dry it immediately.
- Use and store the remote at normal household temperatures.
- Use a soft, damp cloth to clean the remote.
- If the remote is not going to be used for a long period of time, remove the batteries from the remote.
- Handle the remote with care.

# Button Functions

**TV, CBL/SAT, DVD/ VCR, AUX**  
Selects the device to control.

Red Indicator Light when any button is pressed.

**ON•OFF** Turns the device On or Off.

**EXIT** Exits On-Screen Menus.

 
**MUTE** Turns off the TV sound while the picture remains. In **SHIFT** mode **OK** Selects menu items for the device you are controlling.

**INPUT** Selects the video inputs from available viewing sources.

**NUMBERS**  
Enter numbers for direct channel selection.

**DOT:** Used to select digital channels, for example: 4.1, 9.2.


**RECORD, PLAY STOP, REWIND, FAST FORWARD, PAUSE**

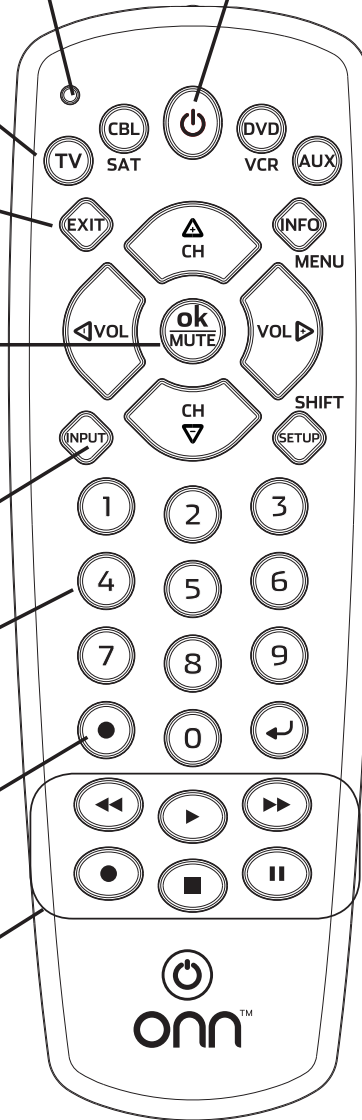

## Button Functions, cont.

**INFO** displays/selects on-screen channel information, etc.

 **MENU** displays the Menu on the TV and other devices. Use the **SHIFT** button to access this feature.

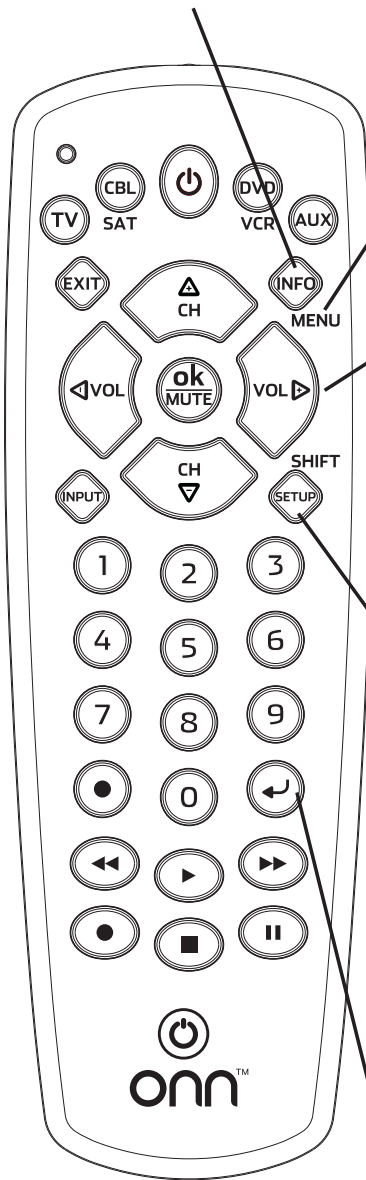

### **VOLUME UP/DOWN**

Changes the volume level of the device, normally the TV.

### **CHANNEL UP/DOWN**

Changes the channels. In **SHIFT** mode, these buttons navigate on-screen cursors and are used to make selections.

**SETUP** button is used to program the remote.

**SHIFT** is the alternative function of this button.

Use the **SHIFT** button to access the Menu and Navigation functions of your device. To enter the **SHIFT** mode press this button once. To exit the shift mode, press the **SHIFT** button again.

*NOTE: The red indicator light will blink when the remote is in SHIFT mode.*

### **ENTER**

 
For some TV models, the **ENTER** button is used after a channel number is entered to immediately change to the selected channel.

# Programming Your Remote

Your ONN universal remote control is designed to control up to 4 different audio/video devices such as TV, DVD, VCR, satellite, cable and audio using only one remote. To use this remote, you will need to program it to control the devices of your choice. There are two ways to program the remote - direct code entry or auto code search.

## Direct Code Entry (Recommended)

1. Locate the Remote Code List provided in this manual. Find the **DEVICE CATEGORY** you wish to program (for example **TV, DVD, SAT, AUX**) and then find the **BRAND** of that device. Circle all the codes under that brand. Example: For a GE TV, locate the TV code section then circle all of the GE TV codes.
2. Manually turn on the device you wish to control.
3. Press and hold the **SETUP** button until the red indicator light stays on (approximately 2 seconds) and then release the **SETUP** button.
4. Press and release the desired device button on the remote (**TV, DVD, SAT, AUX**). The red indicator will blink once and then remain on.
5. Enter the first 4-digit code previously found in the code list using the number buttons on the remote. If the code entered is a valid code, the red indicator light will turn off. If the code entered is not a valid code, the red indicator light will flash and remain on allowing you to re-enter the code.

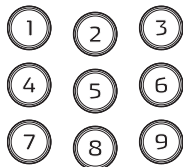

**Note:** *If no buttons are pressed for 35 seconds, the remote will exit the SETUP mode and you will have to*

## Programming Your Remote

*start over.*



6. Point the remote at the device. Press the **POWER** button—if the device turns off, no further programming is required for that device. If the device does not turn off, return to step 3 and use the next code found in the code list. Continue this process until a code for your device is found.

**To view a helpful demonstration video for programming your ONN remote, see QR code on page 2 of this manual.**

### Programming Notes

- If your device does not respond to the remote after trying all codes listed or your brand is not listed in the code list, use the Auto Code Search method to program your remote.
- Sometimes the first code that “works” with your device may operate only a few functions of your device. There may be another code in the code list that performs more functions. Try other codes from the code list for more functionality.
- You can use any device button to control other devices in your home entertainment system. For example, you can use the **AUX** device button to control an audio receiver or a DVD, VCR, satellite, etc.
- For combination devices, you may have to enter a code for each device. For example, for a VCR/DVD device, you may have to enter a code for the DVD under the **DVD** button and enter a code for the VCR using a different device button on the remote.
- Write down the code found to operate your device for future reference.

# Programming Your Remote

## Auto Code Search

The Auto Code Search searches automatically through all of the codes stored in this remote. Read all the following steps prior to starting the auto search as you will need to be prepared to lock-in the proper code when found.



1. Manually turn on the device you wish to control.
2. Press and hold the **SETUP** button until the red indicator light stays on (approximately 4 seconds) and then release the button.
3. Press and release the desired device button on the remote (**TV, DVD, SAT, AUX**). The red indicator will blink once and then remain on.
4. Point the remote at the device and press and release the **POWER** button (for TV) or **PLAY** button (for DVD, VCR, etc.) to start the search. The red indicator will flash (approximately every 2 seconds) as the remote searches. **Note:** *The remote must be pointed at the device for the duration of this search.*
5. Place your finger on the **#1** button so you are prepared to lock-in the code.
6. When the device shuts off or begins playing, press the **#1** button to lock-in the code. The red indicator light will turn off. **Note:** *You have approximately two seconds after the device shuts off or begins playing to lock-in the code.*
7. Point the remote at the device and check to see if the remote operates the device as desired. If it does, no further programming is required for that device. If it does not, return to step 2 and start the auto search.



# Programming Your Remote

To view a helpful demonstration video for programming your ONN remote, see QR code on page 2 of this manual.

## Programming Notes

- This process may take several minutes as the remote contains many codes.
- The **SETUP** button can be used during the search process to reverse the direction of the search of the remote codes. For example, if you miss the code for your device and the remote is continuing to search (as indicated by the blinking red light), press the **SETUP** button and the code search will reverse direction and return to the code.
- When using the Auto Code Search programming method, the device button corresponding to the type of device you want to control must be selected (for example, the **TV** device button must be selected in step 3 if you want to control a TV, the **DVD/VCR** device button for a DVD player, etc.)
- Sometimes the first code that “works” with your device may operate only a few functions of your device. There may be another code in the code list that performs more functions. Continue the code search as directed above until the best code is found.

## Controlling Combo Devices

Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to setup up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the **TV** button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

# Master Volume Feature

## Master Volume Feature

The Master Volume Feature allows you to select a single device (TV or audio receiver) that the volume control always controls. For example, the remote can be in TV mode while the volume buttons control the volume on your audio receiver instead of your TV.

### Enabling the Master Volume Feature



1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.



2. Press and release desired device button (**TV, DVD, SAT, AUX**) for the device you wish to setup to control the volume.



3. Press and release the **MUTE** button.



4. Press and release the **VOL +** button. The red indicator will blink twice and then go off.

To test the feature put the remote in another mode such as the TV mode if you programmed the audio receiver to be the Master Volume Device. Point the remote at the audio receiver, press and hold either the **VOL +** or the **VOL -** button. If the audio receiver volume changes then the remote is programmed correctly. If the TV volume changes and not the audio receiver, you will have to repeat the steps above and test again.



### Disabling the Master Volume Feature

1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.

## Master Volume Feature, cont.



2. Press and release the device button (**TV, DVD, SAT, AUX**) which is programmed to control the Master Volume Feature.



3. Press and release the **MUTE** button.



4. Press and release the **VOL - button**. The red indicator light will blink twice and go off.

To make sure the Master Volume Feature is disabled, put the remote in TV mode if you programmed the audio receiver to be the Master Volume Device. Point the remote at the TV and press a volume button. If the volume changes on the TV, the feature is disabled. If the volume on the audio receiver changes, and not the TV, you will have to repeat the steps above and test again.

### Reset to Factory Settings



1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.



2. Press and release the **OK** button.



3. Press and release the number **#0** button. The red indicator light will flash twice.

### **Remote does not operate your device.**

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device, and make sure that there are no obstructions between the remote and device.
- Make sure you select the appropriate device on the remote you wish to control, for example, TV for TV, DVD for DVD, etc.
- Try programming the remote with a different code. See Direct Code Entry section.
- Remote may not be compatible with your device.

### **Remote does not operate some features of your device.**

- Sometimes a particular code might operate a few features but not all. Try programming remote with a different code from the code list. See Direct Code Entry section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

### **Remote Code is not available for a combo device (e.g. TV/VCR, TV/DVD)**

- Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to set up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the TV button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

**BEFORE YOU RETURN THIS PRODUCT TO THE STORE, PLEASE VISIT THE WEBSITE [www.myOnnRemote.com](http://www.myOnnRemote.com) FOR FURTHER ASSISTANCE; Or, contact us at 1-800-654-8483 between 7:30AM—5:00PM CST.**

## FCC Statement

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Distributed by Wal-Mart Stores, Inc.  
Bentonville, AR 72716  
MADE IN CHINA

# Code List – Lista de Códigos

## TV

Abex .....	0401, 4021
Acer .....	3291, 4001
Acme .....	0471
ADA .....	0461
ADC .....	1431, 1661
Admiral .....	0371, 0681, 1441, 1661, 4991
Advent .....	3261, 0581
.....	0631, 0871, 2131, 2891, 4931
Adventura .....	0151
Aiko .....	1011, 4321
Aiwa .....	0411
.....	0651, 0931, 1411, 4731, 4801
Akai .....	3215
.....	3111, 0331, 0351, 0781, 1901
.....	4141, 4151, 4461, 5141, 5171
Alleron .....	1711
Amark .....	1441
Ames .....	1275
Amtron .....	2191
AMW .....	0645, 0825
ANABA .....	1375
Anam National .....	0271
.....	1941, 2151, 2191, 2331, 3431
AOC .....	0001, 0011, 0251, 0391
.....	0611, 0891, 1221, 4221, 4261
Apex .....	0045, 0191, 0245
.....	0375, 0425, 0431, 0671, 1025
.....	1105, 1891, 2911, 4841, 5111
Archer .....	1441
Aspect .....	1271
Audiovox .....	2191, 2451, 4031, 4051, 4521
Aurora .....	3061
Axion .....	0881
Bang&Olufsen .....	1591
Belcor .....	0001
Bell&Howell .....	1261, 1421, 1661, 1691, 3421
BenQ .....	1741, 1761, 2221, 3871
Bluesky .....	3511, 3921
Bradford .....	2191
Broksonic .....	0211, 0371, 0851, 1631, 4951
Brokwood .....	0001
Candle .....	0001, 0151, 0961, 1221
Capehart .....	0391, 4221
CCE .....	3721
Celebrity .....	1901
Celera .....	0191
Centrios .....	1361
Centurion .....	1221
Cetomer .....	0001, 1631, 2901, 2961
Cetronic .....	1941
Changhong .....	0191, 1891, 4841
Chimei .....	3071
Cineral .....	3511, 4321
Citizen .....	0001, 0351
.....	0371, 0961, 1011, 1221, 1311
.....	1381, 1661, 1941, 2191, 4321
Clairtone .....	0011
Classic .....	0191, 1891, 1941, 4841
CLP .....	0061
CLP Classic .....	0001, 0041, 0161
COBY .....	3351, 2511, 2521
.....	2531, 2541, 2551, 5091, 5191
Color voice .....	1431
Coloryme .....	0001, 1221, 1431
Concerto .....	0001, 1221
Concierge .....	1771, 1781
Contec .....	0011, 1911, 1941, 2191
Cornea .....	1471
Craig .....	1941, 2191
Crosley .....	1961
Crown .....	1941, 2191
CTX .....	1441
Curtis Mathes .....	5351
.....	5371, 0001, 0261, 0351, 1191
.....	1221, 1261, 1311, 1421, 1551
.....	1661, 1691, 3421, 4011, 4941
CXC .....	1941, 2191
Cybervision .....	3511
Daewoo .....	0001
.....	0221, 0251, 0591, 0721, 0831
.....	0971, 1011, 1081, 1221, 1231
.....	1251, 1431, 1501, 1521, 1551
.....	1561, 1941, 2181, 4321, 4681
Daytron .....	0001, 1221
Dell .....	0981
.....	1401, 2041, 3441, 3601, 3811
Diamond Vision .....	1211
.....	1611, 2001, 4771, 4811
Digimate .....	4301
Digistar .....	0381, 0581, 0871, 1061
.....	2451, 2471, 3811, 3881, 3901
Dimensia .....	1421, 1691, 3421
Dish Network .....	5491
Disney .....	0371, 1101
Distar .....	3231
Dukane .....	1271, 1981
Dumont .....	0001, 1771, 1781
Durabrand .....	0371, 0861
.....	0921, 1381, 2271, 2291, 5121
Dynasty .....	1941
Dynex .....	5311, 3141, 3161, 0371, 2891
Electroband .....	0001, 1901
Electrohome .....	0001, 1221, 1921, 2151, 3431
Elektra .....	1661
Element .....	5361, 5411, 2401, 4111
Elite Video .....	0901
Emerson .....	5341, 2761, 5221, 5231, 0001
.....	0021, 0031, 0041, 0271, 0281
.....	0291, 0371, 0441, 0451, 0691
.....	0701, 0731, 0741, 0851, 0931
.....	1221, 1251, 1261, 1371, 1381
.....	1451, 1461, 1551, 1611, 1631
.....	1681, 1701, 1711, 1931, 1941
.....	2171, 2191, 2361, 3451, 4701
.....	4731, 4751, 4761, 4831, 4911
Envision .....	5401
.....	0001, 0071, 1221, 3751, 4261
ESA .....	1381
Fisher .....	1161, 1261
.....	1531, 1581, 1911, 3481, 5001
Fluid .....	2401, 2421, 2431
Fujitsu .....	0901, 1711, 4241, 4341
Funai .....	0701, 0931, 1381
.....	1711, 1941, 2191, 4731, 4761
Futuretec .....	1941, 2191
Gateway .....	0501
GE .....	0001, 0041, 0051, 0141
.....	0261, 0361, 0791, 0811, 1221
.....	1421, 1691, 1921, 1951, 2111
.....	2151, 3421, 3431, 4011, 4921
Gibraltar .....	0001, 1771, 1781
Gold Star .....	0001, 0251, 0611, 0761, 0931
.....	1181, 1221, 1501, 1911, 4731
GPX .....	4701
Gradiente .....	0001, 2291, 3661, 3951, 3961
Grundy .....	1711, 2191
Guestvision .....	1861
Gvision .....	4871
Haier .....	0671
.....	0861, 0921, 1741, 3831, 4851
Hallmark .....	0001, 1221
Hannspree .....	5451, 5461, 5291
Harvard .....	2191
Hauppauge .....	3791
Hello Kitty .....	5391
HP .....	3491, 4881
Hisense .....	5331, 4671, 0671
.....	2081, 2211, 3671, 4381, 4391
Hitachi .....	3341
.....	0001, 0841, 0931, 1041, 1221
.....	1271, 1341, 1371, 1481, 1661
.....	1721, 1751, 1801, 1911, 1981
.....	2051, 3621, 4121, 4331, 4731
Hyundai .....	4651
ILO .....	3215
.....	1141, 1381, 1971, 2391, 2481
.....	3691, 4231, 5031, 5141, 5171
IMA .....	2191
Infinity .....	1171, 1961, 4791
InFocus .....	3421
Initial .....	2481, 4231, 4821, 5031, 5041
Insignia .....	0371, 0581, 0701, 0871
.....	0921, 1241, 1381, 2241, 2271
.....	2891, 2921, 3761, 3841, 4371
.....	4721, 4761, 5051, 5061, 5181
Integra .....	1841
Inteq .....	1771, 1781
ISymphony .....	3041
Janeil .....	0151

# Code List – Lista de Códigos

JBL.....	1961	.....	2771, 2781, 2791, 5151, 5161
JC Penney.....	0001, 0051, 0251, 0261	Oncommand.....	1861, 3991
.....	0351, 0791, 0811, 0961, 1221	Onking.....	1941
.....	1311, 1421, 1451, 1691, 1911	Onkyo.....	3101
.....	1921, 1951, 3421, 3451, 4011	Onwa.....	1941, 2191
JCB.....	1901	Optimus.....	0201, 0401, 1571
Jensen.....	0001, 1221, 2271	.....	1881, 3551, 4021, 4691, 5201
JVC.....	5281, 0311, 0481, 0771, 0901	Optoma.....	3121, 2441
.....	0941, 1281, 1481, 1801, 1911	Optonica.....	0341, 1441
.....	2381, 2751, 4121, 4201, 5071	Orion.....	0281, 0371, 1771, 1781
Kawasaki.....	4741	Panasonic National.....	5481, 3381, 3401
Kawasho.....	0001, 1221, 1901	.....	0051, 0201, 0951, 1091, 1491
Kaypani.....	0391, 4221	.....	1571, 1651, 1831, 1881, 1961
KEC.....	2191, 1941	.....	2151, 2711, 2801, 3431, 3551
Kenwood.....	0001, 1221	.....	3771, 4691, 4781, 4861, 5201
KLH.....	0191	Philco.....	0001, 0251, 0321, 0961
Kloss Novabeam.....	0151, 1021	.....	1021, 1221, 1671, 1801, 1961
Kogi.....	4871	.....	2151, 2321, 2941, 3431, 3931
Konka.....	5441, 0471, 0521	Philips.....	3031, 3131, 3151
.....	0751, 1241, 1671, 2121, 2191	.....	3171, 3371, 3391, 0181, 0001
.....	2241, 2371, 4621, 4901, 4971	.....	0161, 0321, 0421, 0541, 0661
KTV.....	0011, 1491, 1681, 1941, 2191	.....	0701, 0791, 0911, 0961, 1021
Kurazai.....	1661	.....	1151, 1171, 1381, 1391, 1601
KWorld.....	2931	.....	1741, 1801, 1961, 2151, 2321
Lasonic.....	1211, 1611, 4811	.....	3431, 3541, 3591, 3861, 3911
Legend.....	0581	.....	3971, 3981, 4191, 4761, 4791
LG.....	5501, 5511	Philips Magnavox.....	0181, 0681, 0911, 1171
.....	3001, 3021, 3091, 3221, 3281	.....	1961, 2321, 3591, 4791, 4991
.....	3311, 5271, 0001, 0131, 0251	Pilot.....	0001
.....	0611, 0761, 0931, 1181, 1221	Pioneer.....	0001, 0401, 1221, 1371
.....	1471, 1501, 1911, 3811, 4731	.....	1511, 1841, 1981, 4021, 4661
Liquidvideo.....	0881, 1111	PIVA.....	2411, 5021
Lodgenet.....	1421	Planar.....	4251
.....	1661, 1691, 2091, 3421, 4091	Polaroid.....	0191
Loewe.....	1871, 1961	.....	0581, 1241, 2081, 2271, 2311
Logik.....	1421, 1661, 1691, 3421	.....	2401, 2451, 3741, 4631, 5131
Luce.....	0301	Portland.....	0001
Luxman.....	0001, 1221	.....	0251, 1011, 1081, 1221, 1551
Lxi.....	0001, 0261, 0811	Precision.....	0621
.....	0931, 1221, 1261, 1311, 1421	Price Club.....	0351
.....	1691, 1961, 3421, 4011, 4731	Prima.....	3011
Magnasonic.....	1711	.....	0381, 0581, 0631, 0871, 2451
Magnavox.....	0001	Princeton Graphics.....	1301, 1441
.....	0321, 0681, 0701, 0961, 1021	Prism.....	0051
.....	1171, 1221, 1801, 1961, 2321	Proscan.....	0261, 0811, 1421
.....	4191, 4641, 4761, 4791, 4991	.....	1691, 2061, 2301, 3421, 4011
Majestic.....	1421, 1661, 1691, 3421	Proton.....	0001, 0391, 0641, 1221
Manhattan.....	5381	.....	1911, 2231, 4211, 4221, 4271
Marantz.....	0001, 1221, 1841, 1961	Protron.....	3731, 4301
Maxent.....	3361, 0501	Proview.....	2401, 2421, 2431
Medion.....	1101, 1141, 2351	Pulsar.....	0001, 1771, 1781
Megatron.....	0001, 1221, 1271	Pyle.....	3331
Mei.....	0011	Quasar.....	0051, 0201, 1091
Memorex.....	0001, 0211, 0371, 1161, 1221	.....	1491, 1571, 1831, 1881, 1961
.....	1261, 1421, 1631, 1661, 1691	.....	2151, 3431, 3551, 4691, 5201
.....	1711, 2401, 3421, 4251, 5001	Radio Shack.....	0001, 0141, 0341, 0931
MGA.....	0001, 0251, 1221	.....	1001, 1221, 1261, 1421, 1571
.....	1581, 1711, 1801, 1911, 1921	.....	1691, 1701, 1911, 1941, 2111
Midland.....	0051, 0261	.....	2191, 3421, 3551, 4731, 4921
.....	0811, 1691, 1771, 1781, 4011	RCA.....	0001, 0051, 0091
Mintek.....	4231	.....	0141, 0251, 0261, 0361, 0551
Minutz.....	1951	.....	0811, 0891, 1001, 1131, 1221
Misakai.....	1381	.....	1331, 1371, 1421, 1521, 1691
Mitsubishi.....	3271, 0001, 0251, 1221, 1581	.....	1851, 1921, 2011, 2061, 2111
.....	1711, 1801, 1811, 1921, 2701	.....	2151, 2251, 2301, 2851, 2951
Monivision.....	0491	.....	3421, 3431, 3571, 4011, 4921
Montgomery Ward.....	1421, 1661, 1691, 3421	Realistic.....	0001, 0141
Moteva.....	1261, 3661	.....	0341, 0931, 1001, 1221, 1261
Motorola.....	1441, 2151, 3431	.....	1421, 1571, 1691, 1701, 1911
MTC.....	0001	.....	1941, 2191, 3421, 3551, 4731
.....	0011, 0251, 0351, 1221, 1311	Rhapsody.....	0011
Multitech.....	2191	Runco.....	1771, 1781, 1841
Multivision.....	0081	Sampo.....	0001, 0121
Myron&Davis.....	2101	.....	0391, 0501, 1221, 1911, 4221
NAD.....	0001, 0401, 1221, 1311, 4021	Samsung.....	5471, 5521, 3301, 3321
NEC.....	0001, 0251, 0341, 1221, 1431	.....	2741, 2961, 0331, 0001, 0101
.....	1801, 1841, 2151, 3431, 4401	.....	0251, 0261, 0351, 0531, 0571
Net TV.....	0121, 0501	.....	0711, 0781, 1191, 1221, 1311
Nexxtech.....	0871, 1201	.....	1501, 1911, 2071, 2141, 2721
Nikei.....	1941	.....	3471, 3561, 4011, 4941, 4961
Nikko.....	0001, 1011, 1221, 4321	Samsux.....	1221
Niko.....	3581	Samtron.....	0351
Norcent.....	0511, 0671, 2181	Sansui.....	5551, 0211, 0371, 1631
NTC.....	1011, 4321	Santeca.....	0171
Olevia.....	3081, 2431	Sanyo.....	2981, 2991, 3051

# Code List – Lista de Códigos

.....5251, 2871, 5241, 5261, 0001  
 .....0801, 1051, 1161, 1261, 1531  
 .....1581, 1911, 2881, 3481, 5001  
 Sceptre.....3521, 4071, 5111  
 Scotch.....0001, 1221  
 Scott.....3215, 0001, 0021, 0281  
 .....1221, 1711, 1941, 2191, 5141  
 Sears.....0001, 0211, 0261  
 .....0351, 0701, 0811, 1221, 1261  
 .....1291, 1311, 1381, 1421, 1531  
 .....1581, 1691, 1711, 1911, 1961  
 .....2021, 3421, 3481, 4011, 4761  
 Selectron.....2471, 2491, 2501  
 Semp.....3611  
 Sharp.....5421, 3181, 3191, 3201  
 .....2731, 0001, 0341, 0461, 0681  
 .....0691, 1221, 1291, 1441, 2031  
 .....2201, 2261, 3461, 4751, 4991  
 Shogun.....0001  
 Signature.....1421, 1661, 1691, 2171, 3421  
 Signet.....2811, 2821, 2861  
 Simpson.....0961  
 Sonic.....0011  
 Sony.....5321  
 .....1071, 1641, 1731, 1901, 2161  
 .....2741, 3531, 3891, 4101, 4981  
 Soundesign.....0001  
 .....0961, 1221, 1711, 1941, 2191  
 Sova.....3631, 4431  
 Soyo.....4611, 5101  
 Spectra.....1611  
 Spectravision.....2341  
 Squareview.....1381  
 SSS.....0001, 1941, 2191  
 Star Sight.....0061  
 Starlite.....2191  
 Superscan.....0701, 1291, 2021, 4761  
 Supersonic.....0241, 4701  
 Supra.....0001, 1991  
 Supremacy.....0151  
 Supreme.....1901  
 SVA.....0671, 2101  
 Sylvania.....0001, 0321  
 .....0371, 0701, 0931, 0961, 1021  
 .....1221, 1381, 1801, 1821, 1961  
 .....2321, 2761, 3701, 4731, 4761  
 Symphonic.....0021, 0701  
 .....0931, 1381, 2191, 4731, 4761  
 Syntax.....2431, 5151, 5161  
 Tandy.....1441  
 Tatung.....1141, 1741, 2151, 3431  
 TCL.....2851, 0091, 1421  
 .....1691, 1851, 2011, 2061, 2111  
 .....2301, 3421, 3431, 3571, 4921  
 Technics.....0051  
 Techwood.....0001, 0051, 1221  
 Teknika.....0001, 0151, 0251  
 .....0351, 0961, 1011, 1221, 1311  
 .....1421, 1571, 1661, 1691, 1711  
 .....1911, 1941, 2191, 3421, 3551  
 Telecaption.....0821  
 Telerent.....1421, 1661, 1691, 3421  
 Tera.....0001, 0641  
 Tevion.....1141  
 TMK.....0001, 1221  
 Toshiba.....5531, 3211, 1311  
 .....0211, 0231, 0341, 0351, 0821  
 .....1121, 1191, 1261, 1351, 1541  
 .....1571, 1621, 1801, 1841, 1911  
 .....2691, 3551, 4891, 4941, 5081  
 Trutech.....2461, 3821, 4551  
 Universal.....0791, 1951  
 Venturer.....3781  
 Victor.....1481, 4121  
 Videocon.....4061  
 Vidtech.....0001, 0251, 1221  
 View Sonic.....5301  
 .....0501, 1981, 3751, 3801, 4281  
 Viking.....0151  
 Viore.....5431, 2831, 2841, 3681  
 Visteon.....3411  
 Vizio.....5561, 5571, 5581, 5591  
 .....5601, 5611, 5621, 5631, 5641  
 .....5651, 5661, 5671, 5681, 5691  
 .....5701, 5711, 2901, 1471, 1741

.....2021, 3651, 3741, 3851, 4081  
 Wards.....0001, 0021  
 .....0251, 0321, 0341, 0791, 0961  
 .....1021, 1221, 1321, 1421, 1661  
 .....1691, 1711, 1951, 1961, 3421  
 Westinghouse.....3241, 3251  
 .....0111, 1901, 2281, 3711, 3851  
 White-Westinghouse.....0601, 0931, 1081  
 .....1501, 1521, 1551, 3641, 4731  
 Yamaha.....0001, 0251, 1221, 1571, 3551  
 Zenith.....5281, 5271, 0001  
 .....0061, 0131, 0371, 0681, 0691  
 .....0931, 0941, 0991, 1011, 1031  
 .....1081, 1171, 1181, 1191, 1221  
 .....1251, 1271, 1471, 1631, 1661  
 .....1751, 1771, 1781, 1791, 2171  
 .....2291, 3501, 4201, 4321, 4731  
 .....4751, 4791, 4941, 4991, 5211

## TV/VCR COMBOS

Admiral.....0302, 1682  
 Aiwa.....0312, 0432, 0752  
 Akai.....0032, 1592  
 Broksonic.....(0851 & 0462)  
 .....(0851 & 0892), 0942, 1631  
 Curtis mathes.....0652, 1522  
 Daewoo.....(1081 & 0762)  
 .....(1251 & 0082), 1092  
 Diamond vision.....(2001 & 0422)  
 Durabrand.....(2291 & 0182)  
 Electrohome.....0032, 1592  
 Emerson.....(0851 & 0462), (0851 & 0892)  
 .....(1251 & 0082), 0032, 0192  
 .....0232, 0312, 0332, 0432, 0942  
 .....1092, 1172, 1432, 1592, 1631  
 Fisher.....0602, 1712  
 Funai.....0312, 0432  
 GE.....1152, 1482  
 Goldstar.....0312, 0432, 1181  
 Gradiente.....(2291 & 0182)  
 Hitachi.....0312, 0432  
 Infinity.....0622  
 JVC.....0452, 4201  
 LG.....0312, 0432, 1181  
 LXI.....0312, 0432  
 Magnavox.....0302, 0412, 0622, 1682  
 Memorex.....0602, 0942, 1631, 1712  
 Mitsubishi.....0032, 1592  
 Optimus.....1722, 0122, 1062, 1762  
 Panasonic.....1722, 0122, 1062, 1762  
 Philips.....0412, 0622  
 Philips Magnavox.....0302, 0622, 1682  
 Quasar.....1722, 0122, 1062  
 Radio Shack.....0312, 0432, 1152, 1482  
 RCA.....(1691 & 0242), 1152, 1482  
 Realistic.....0312, 0432  
 Samsung.....0652, 1522, 1535, 2141  
 Sansui.....0942, 1631  
 Sanyo.....0602, 1712  
 Sharp.....1682, 0302, 0332  
 Sony.....0972, 1292, 1652  
 Sylvania.....0312, 0432  
 Symphonic.....0312, 0432  
 Toshiba.....0652, 0902, 1402, 1522  
 White westinghouse.....(1081 & 0762)  
 .....0312, 0432  
 Zenith.....(1081 & 0762)  
 .....(1251 & 0082), (2291 & 0182)  
 .....0302, 0312, 0332, 0432  
 .....0452, 0622, 0652, 0942, 1092  
 .....1181, 1522, 1631, 1682, 4201

## TV/DVD COMBOS

Advent.....1515  
 Akai.....(3215 & 3285), 4461  
 Apex.....(0191 & 1245)  
 Audiovox.....(4031 & 4481)  
 .....(4051 & 1135), 4521  
 Axion.....(0881 & 1335)  
 Broksonic.....0015, 0211  
 Coby.....3475  
 Changhong.....(0191 & 1245)



# Code List – Lista de Códigos

Classic.....(0191 & 1245)  
 Daewoo.....(1561 & 0065)  
 Diamond Vision.....(1611 & 0855)  
 .....(2001 & 0422), 0455  
 Durabrand.....(2291 & 3885), 0205  
 Emerson.....0412, 0445  
 Funai.....0412, 0445  
 GPX.....0135  
 Haier.....0315, 1257  
 Ilo.....(3215 & 3285), 1945  
 Initial.....0994, 1945, 2735  
 Insignia.....(1241 & 0285), (2891 & 3335)  
 .....0412, 0445, 2805, 2815, 3305  
 JVC.....1685, 3015  
 Kawasaki.....0325  
 Konka.....1425, 1605  
 Lasonic.....(1611 & 0855)  
 Liquidvideo.....(0881 & 1335)  
 Magnavox.....0412, 0445  
 Maxent.....3361  
 Memorex.....0015, 0211  
 Nexxtech.....1201, 2005  
 Panasonic.....0552, 0595, 1195, 1346, 3401  
 Philips.....3371  
 .....(1381 & 0702), 0412, 0445, 0795  
 Piva.....1805  
 Samsung.....1535  
 Sansui.....0015, 0211  
 Sears.....0015, 0211  
 Sharp.....(1291 & 3115)  
 Sova.....(3631 & 4431)  
 Supersonic.....0135  
 Sylvania.....(1381 & 0702), 0412, 0445  
 Symphonic.....0412, 0445  
 Toshiba.....0015, 0115, 0211, 3075  
 Trutech.....4551  
 Westinghouse.....(3711 & 2865)

## SAT/CBL

ABC.....0004, 0074, 0134  
 .....0464, 0594, 0784, 0794, 1034  
 ADB.....1933  
 Adelphia.....1404  
 .....2023, 0514, 0574, 0744, 1523  
 ADTH.....1393  
 Akai.....1323, 1303  
 Allegro.....0054, 0114  
 Americast.....1594, 0254  
 Amino.....2063  
 Amplica.....0103  
 Antronix.....0264, 0334  
 Archer.....0264, 0334, 0404, 0474, 1044  
 Arris Gateway.....1274  
 Astro.....1273  
 AT&T.....1963  
 .....2093, 0844, 1272, 0514, 0674  
 Bell.....1963, 5491, 2073, 0173  
 .....2083, 2103, 0433, 0903, 0984  
 Bell Expressvu.....0073  
 .....0173, 0343, 0433, 0903  
 Bell South.....0254  
 Bendbroadband.....1244  
 Bright House.....1394, 0694  
 Buckeye.....1233  
 Cable One.....1384  
 Cabletenna.....0264  
 Cableview.....0264  
 Cablevision.....1434  
 .....1404, 0514, 0654, 0694, 1523  
 Cebride.....1374  
 Century.....0474, 1723  
 Cetomer.....0723, 1153  
 Channel Master.....0283, 0393, 0483  
 Chapparral.....0573, 0653  
 Charter.....1304, 1404, 0824  
 .....1523, 0514, 0664, 0684, 0714  
 Charter Communications.....1274  
 Charter Digital.....1264  
 Cheyenne.....0653  
 Cisco.....1444  
 .....1444, 1464, 1474, 1484, 1494  
 Citizen.....0474  
 Clearmax.....1024

Cogeco.....1294, 0514  
 Color Voice.....0534, 0604  
 Comcast.....1544, 1554  
 .....1283, 0824, 1404, 0514, 0684  
 Comtronics.....0014, 0084  
 Contec.....0144, 1054  
 Coolsat.....1733, 1913  
 Cox.....0514, 0824  
 .....1324, 1334, 1364, 1404, 1444  
 .....1454, 1464, 1474, 1484, 1494  
 Cox Digital Cable.....1404, 0514, 0734  
 Digital Music Express.....0044  
 Digital Stream.....1203, 1194  
 Digiwav.....1953, 1923  
 Director.....0514  
 DirecTV.....1504, 1514, 0203, 0213, 0233  
 .....0303, 0333, 0353, 0443, 0523  
 .....0553, 0623, 0703, 0793, 0803  
 .....0853, 0873, 0983, 0993, 1073  
 .....1083, 1093, 1103, 1113, 1123  
 .....1133, 1143, 1153, 1163, 1173  
 .....1183, 1193, 1353, 1443, 1513  
 .....1533, 1773, 1783, 1793, 1893  
 Dish Network.....2073  
 .....2083, 1613, 0073, 0173, 0343  
 .....0403, 0433, 0493, 0603, 0783  
 .....0903, 1003, 1013, 1023, 1033  
 .....1043, 1053, 1063, 1503, 1683  
 Dishpro.....0073  
 .....0403, 0493, 0603, 1503, 1683  
 Drake.....0023, 0293, 0733  
 Dreambox.....2113, 2123, 1553  
 DX Antenna.....0383, 0753  
 Eastern.....0214  
 Echosphere.....0433  
 Echostar.....0903  
 .....0073, 0173, 0343, 0403, 0433  
 .....0493, 0603, 0783, 1503, 1683  
 Emtec.....4411, 4441  
 Entone.....2043, 2053  
 Everquest.....0014  
 Expressvu.....0073, 0173, 0343, 0433, 0903  
 Fortec Star.....0083  
 .....0183, 0263, 0373, 0463, 0473  
 Fujitsu.....0673, 0763  
 Garrard.....0474  
 GC Electronics.....0334  
 GE.....0384, 0874, 0333  
 .....0543, 0643, 0723, 0793, 0803  
 .....0873, 1073, 1083, 1373, 1383  
 Gemini.....0123, 0204, 0344  
 General Instrument(GI).....0013  
 .....0004, 0093, 0163  
 .....0193, 0323, 0453, 0633, 0833  
 .....0893, 0953, 0963, 1573, 1583  
 .....1603, 0044, 0074, 0314, 0374  
 .....0464, 0514, 0594, 0634, 0784  
 .....0794, 0814, 0884, 0894, 1034  
 Geosatpro.....2003  
 Globecast.....0003, 1004  
 Go Video.....1883  
 Gold Star.....0924  
 Hamlin.....0414, 0464, 0484, 0544, 0784  
 Hitachi.....0594, 0303  
 .....0443, 0523, 0623, 1103, 1153  
 HNS.....1153  
 Hughes.....0593, 1343  
 Hughes Network.....0303  
 .....0443, 0523, 0563, 0593  
 .....0703, 1093, 1103, 1153, 1343  
 Humax.....1505  
 Illico.....1354, 1404, 1523  
 ILO.....1035  
 Insight.....1284, 1314  
 Jasco.....0474  
 Jerrold.....0004, 0074, 0194  
 .....0314, 0324, 0444, 0464, 0514  
 .....0594, 0784, 0794, 0814, 1034  
 JVC.....1145, 0433, 0783  
 Kenwood.....0413  
 Knology.....1424, 1344, 1284, 1564  
 LG.....2925, 0303, 1103, 1153  
 Liteon.....1035  
 Luxor.....0503, 1653  
 Macom.....0613

# Code List – Lista de Códigos

Magnavox.....	0203, 0533, 0783, 0094, 1064	Star Sight.....	0244, 0863
Mediacom.....	1284, 1584	Star Trak.....	0423, 0184
Medion.....	1035	Starchoice.....	0163
Memorex.....	0154	.....	0323, 0633, 1563, 1573, 1583
Microyal.....	1423	Starcom.....	0314, 0464, 0784
Mitsubishi.....	1534, 0303, 0443	Stargate.....	0014
.....	0523, 0623, 1093, 1103, 1153	STS.....	0383, 0583, 0663
Motorola.....	0453, 1573	Super Guide.....	0513
.....	1593, 1603, 1863, 0004, 0074	Sylvania.....	1903
.....	0194, 0314, 0374, 0514, 0594	Tandy.....	0434, 0974
.....	0634, 0684, 0794, 0814, 0824	Televiow.....	0014
.....	0844, 0884, 0894, 0914, 1034	Telsat.....	1723
Movie Time.....	0224, 1074	Telus.....	1943
Moxi.....	1274	Texscan.....	0364
NEOSTAT.....	1413	Thomson.....	0803, 1753
NET.....	1543, 1713	Time Warner.....	1254, 1424, 1404
Norstat.....	0683	.....	0514, 0694, 0724, 0824, 1523
Novaplex.....	0834, 0854	Tivax.....	1293
Nowtv.....	1473	Tivo.....	0092, 0252, 0353, 0982, 1052
NSC.....	0224, 1074	.....	1162, 1492, 1502, 1505, 1542
OAK.....	0144, 0354, 1054	.....	1745, 1223, 0704, 0754, 0764
Omegasat.....	1983	Tocom.....	0004
Onkyo.....	1243	.....	0444, 0504, 0634, 0934, 1034
Orasat.....	1973	Toshiba.....	1735, 1745
Orion.....	1523	.....	3325, 0154, 0063, 0143, 0303
Pace.....	1363	.....	0443, 0523, 0623, 0713, 0743
.....	0053, 0133, 1593, 1673, 0904	.....	0973, 1093, 1103, 1133, 1153
Panasonic.....	0545, 1272, 0304, 0394, 0954	TV86.....	0224, 1074
.....	1014, 0213, 0223, 0243, 1353	TVA.....	1703
Pansat.....	1993, 0033, 0883, 1403	Ultimate TV.....	0333, 0553, 0873
Paragon.....	0154, 0284	Uniden.....	0693, 0823, 0863
Philips.....	0092, 0252, 1052, 1163, 1492	Unika.....	0264, 0334, 0474
.....	1502, 1542, 0094, 0344, 0424	United.....	1663
.....	0474, 0494, 0554, 1064, 1084	United Cable.....	0464, 0784
.....	1094, 1104, 0203, 0303, 0443	Universal.....	0054, 0264, 0334
.....	0523, 0533, 0623, 0703, 0783	.....	0404, 0474, 0564, 0944, 1044
.....	1093, 1103, 1153, 1633, 1753	Verizon.....	2033, 1404, 0514
Philips Magnavox.....	0203	.....	1283, 0174, 0684, 0824, 1523
.....	0533, 0783, 0064, 0104	Video Cipher ii.....	0023
Pinnacle.....	1493, 1823, 1833	Video Tech.....	0454
Pioneer.....	1404, 0532, 0985, 2855	Videotron.....	1404, 1574, 1523
.....	1853, 0024, 0274, 0614, 0924	Videoway.....	0034
Polaroid.....	4561	Viewsat.....	1803
Primestar.....	1253, 0323, 0633, 1563, 1573	Viewstar.....	0084, 0094
Prosat.....	0813, 1333	.....	0224, 0434, 0974, 1064, 1074
Proscan.....	0333, 0643, 0723	Visionetics.....	1483
.....	0803, 0873, 1073, 1083, 1383	Visiontec.....	1693
Pulsar.....	0154	Voom.....	2971
Quasar.....	0154	V-Tech.....	1813
Radio Shack.....	0064, 0104, 0114, 0964	Web TV.....	0113, 0783
RCA.....	0244, 0394	Zenith.....	0114
.....	0474, 1014, 1083, 0333, 0363	.....	0154, 0474, 0524, 0584, 0624
.....	0543, 0643, 0723, 0793, 0803	.....	0644, 0023, 0123, 0153, 0253
.....	0873, 1073, 1373, 1383, 1873	.....	0293, 0313, 0733, 1173, 1593
RCN.....	0514, 0824	Zenith Network.....	0254
Realistic.....	0334, 0273, 0843, 1643	Zinwell.....	2013
Regal.....	0544		
Regency.....	0214		
Rembrandt.....	0594		
ReplayTV.....	1272		
Rogers.....	1344, 0174, 1523		
Runco.....	0154		
Samsonic.....	1433		
Samsung.....	4451, 1213		
.....	0043, 0233, 0853, 1113, 1123		
.....	1143, 1763, 0014, 0024, 0924		
Scientific Atlanta.....	1324		
.....	1334, 1364, 1404, 1414, 1444		
.....	1454, 1464, 1474, 1484, 1494		
.....	0124, 0134, 0164, 0234, 0294		
.....	0574, 0714, 0804, 0834, 0864		
Seiki.....	1263		
Sharp.....	1853		
Shaw.....	1524, 0514		
Sierra I II III.....	0653		
Signal.....	0014		
Signature.....	0594		
Sky Network.....	0053, 0133, 1363, 1593, 1673		
.....	1743, 1753, 1773, 1783, 1793		
SL Marx.....	0014		
Sonic Blue.....	1272		
Sony.....	1162, 1302, 2865, 2985, 3055		
.....	0113, 0353, 0553, 0773, 1893		
Sprucer.....	0394, 1014		
Standard.....	0364		

## HDTV Set Top Boxes

Apex.....	2911
Charter.....	0174, 1523
Directv Models.....	0703
.....	0983, 1443, 1513, 1533
GE HDSTB.....	0874
Go Video Hdt100.....	2631
Hitachi 61hdx98b.....	1103, 2661
Hughes Hird E8.....	0303
.....	1103, 1153, 2591, 2651, 2661
Hughes Htl HD.....	0303
.....	1103, 1153, 2591, 2651, 2661
Insignia.....	2921
KWorld SA290QE.....	2931
LG HTL HD.....	0303
.....	1103, 1153, 2591, 2651, 2661
LG LSS 3200a.....	0303
.....	1103, 1153, 2591, 2651, 2661
Mitsubishi SRHD 400.....	1103, 2661
Mitsubishi SRHD 500.....	1103, 2661
Mitsubishi SR HD5.....	1103, 2661
Motorola HDT100.....	2601
Motorola HRT100.....	2601
Philco TB100HH9.....	2941
Philips DSHD800R.....	1103, 2661
Pioneer SH-D505.....	2561

# Code List – Lista de Códigos

Proscan PSHD105.....	0803, 2581
RCA DTA800B1 .....	2951
RCA DTC-100.....	0803, 2581
RCA DTC-210.....	0803, 2581
RCA HD65W20.....	2611
RCA PSHD105 .....	0803, 2581
Samsung SIR-T165 .....	1143, 2671
Samsung SIR-T351 .....	1143, 2671
Samsung SIR-TS160.....	1123, 2621
Samsung SIR-TS360.....	1123, 2621
Sony SATHD100.....	2681
Sony SATHD200.....	2681
Sony SATHD300.....	2681
Sylvania 6900DTD.....	2641, 2941
Toshiba DST3100 .....	0303, 1153, 2591, 2651
Toshiba DW65x91 .....	0303, 1153, 2591, 2651
Toshiba DST3000 .....	0303, 1153, 2591
Venturer .....	1164
Zenith DTV1080.....	1173, 2571
Zenith HDSTAT420 .....	1173, 2571
Zenith HDSTAT520 .....	1173, 2571

## DTV

Access HD.....	1234
Airlink101.....	1174
Alpha Digital .....	1234
Amtec .....	1234
Apex .....	1114
Artec .....	1224
Cadence .....	1214
Channel Master .....	1204
Coship .....	1214
Digitalstream.....	1194
Dish Network.....	0073
Echostar .....	0073
GE.....	0874
Goodmind.....	0874
Gridlink .....	1144
iNet Access .....	1234
Insignia .....	1184
Kingbox .....	1224
Lasonic .....	1144
Magnavox.....	2941
Microgem .....	1154
Philco.....	2941
RCA .....	1083
Sansonic.....	1144
Skardin .....	1174
Sunkey.....	1134
Tivax .....	1234
Venturer .....	1164
Winegard .....	1164
Zenith.....	1184
Zentech .....	1174
Zinwell .....	1124

## STREAMING MEDIA

Apple .....	5541, 4295
Asus.....	1684
Dlink.....	1614, 1724
HP.....	1624
Iomega.....	1744
LG.....	1714
Magnavox.....	1704
Netgear .....	1604, 4475
Niveus.....	1634
Philips .....	1654
Popcorn Hour.....	1664
RCA .....	1694
Roku .....	4395, 4355
Seagate .....	1674
Sling Media.....	1644
Vudu .....	1734
WD.....	4345, 4265
X-Box.....	4245, 4255

## DVD

Acesonic.....	3135
Advent .....	1515
Afreay .....	0575
Aiwa.....	0035, 0195, 0235, 3285, 3565

Allegro .....	3725, 3885
Ames .....	1275
AMW.....	0645, 0825
Anaba .....	1375
Apex .....	0045, 0245
.....	0375, 0425, 0615, 0845, 0945
.....	0965, 1025, 1065, 1105, 1235
.....	1245, 1405, 1675, 3825, 3895
Aspire .....	1695
Astar .....	3525
A-Trend.....	1585
Audiovox.....	1335, 3585, 3625
Axion.....	1335
B&K .....	0885
Blaupunkt.....	1105, 3895
Blue Sky .....	0215, 0245, 3155
Blue-Ray.....	2795, 2965, 2995, 3315
.....	3685, 3695, 3705, 3885, 3905
Body Sonic.....	0575
Bose .....	4455, 4465, 1475, 3955
Boss .....	1325
Boston Acoustic.....	3245
Britania .....	3675
Broksonic .....	0015, 0695, 1525, 3495
Cavs .....	2745
Centrios .....	0955, 1335, 1365, 1755, 1765
.....	1785, 1795, 1845, 1875, 1895
.....	1935, 1975, 2015, 3945, 3965
Cetomer.....	0075
Changhong.....	1245
Cine Vision.....	0205, 3885
Citech .....	2065
Citizen.....	2065
Classic.....	1245, 1275, 1965
COBY .....	3835, 0085, 0245, 0475
.....	0485, 0505, 0675, 0835, 2085
.....	2095, 2105, 2115, 2125, 2155
.....	2655, 2885, 3145, 3265, 3475
Concept.....	1105, 3895
Conia .....	0245
Contel.....	2915
Criterion.....	0785
Curtis International.....	0835, 1005, 2885
Curtis Mathes.....	4185
Cyber Home .....	4155, 0175, 1015, 1585, 2045
Cyber Vision .....	3595
Cytron.....	0435, 0725
Daewoo .....	0065, 0345, 1115, 1285, 1385
Denon .....	1075, 1265, 3315
Denzel.....	0765
Desay.....	0865
Diamond Vision .....	0465, 0855, 1485, 3755
Digitrex .....	0245
Digix.....	0125
Disney.....	0795, 3815
Drive .....	3535
Dual .....	0005
.....	0435, 0515, 0605, 0765, 3035
Durabrand.....	0205, 0435, 0955, 2685, 2935
.....	3515, 3525, 3885, 3925, 3945
DVD 2000 .....	1415
Dynex .....	4235, 2455, 2255
Eigervision .....	3615
Element.....	4305
Elta.....	0055, 0235
Emerson .....	0205, 0445, 0795, 0975
.....	1185, 3745, 3815, 3855, 3885
Esa.....	0515
Escient.....	2845
Fahrenheit.....	1205
Fisher.....	0405, 2645
Funai.....	0445, 0795, 3745, 3815, 3855
GE.....	0915, 1105, 3895
Gold Star .....	0205, 3885
Go Video.....	0075, 0255
.....	0415, 0565, 0665, 1275
.....	1315, 1385, 1495, 3735, 3765
GPX .....	0135, 0495
Gradiente.....	0215, 3635, 3645
Greenhill .....	1105, 3895
Haaz .....	1295, 1465
Haier .....	0315, 4015
Harman/Kardon.....	0585
HD-DVD.....	2795, 2835, 2965
.....	3685, 3695, 3705, 3885, 3905

# Code List – Lista de Códigos

Helios.....	2275	.....	2855, 2895, 2975, 3695, 3905
Hello Kitty.....	4195	Piva.....	1805
Hitachi.....	0025, 0545	Polaroid.....	0185
.....	0565, 0765, 0925, 1245, 3765	.....	0685, 1025, 1485, 3665, 3825
Hiteker.....	0245	Polk Audio.....	4105
Humax.....	1505	.....	0735, 0745, 1395, 2945, 3795
ILO.....	1035, 1945, 3285	Portland.....	0235, 1545
Infinity.....	0575	Power Acoustik.....	3575
Initial.....	1105, 1945, 2735, 3895, 3935	Proline.....	0215
Insignia.....	4205	Proscan.....	0915, 1135
.....	2365, 0975, 0205, 0285, 0445	Prosonic.....	0485
.....	0725, 1105, 1335, 1945, 2195	Protron.....	0305
.....	2805, 2815, 2915, 3305, 3335	Pyle.....	2515, 1155
.....	3745, 3785, 3815, 3885, 3895	Radio Shack.....	0955
Integra.....	1435	.....	0995, 1165, 1645, 2905, 3945
IRT.....	2885	RCA.....	2465, 0215
ISymphony.....	2525	.....	0915, 0955, 1105, 1135, 1165
JBL.....	0585	.....	1645, 2755, 2905, 3895, 3945
JVC.....	2385, 2535	Regent.....	1345, 3925
.....	0155, 0395, 0755, 1145, 1685	Reoc.....	1295
.....	2025, 2945, 3015, 3795, 3805	RIO.....	0205, 3885
Jwin.....	0275, 1065, 1655, 3275	RJ Technology.....	1825, 2715
Kawasaki.....	0325, 0955, 3945	Rosen.....	1175, 3035
Kenwood.....	0935, 1075	Rotel.....	0395
Kiss.....	0765	Saba.....	0995
KLH.....	0375, 0465, 1105, 3895	Sampo.....	0575
Konka.....	0285, 1085, 1255, 1425, 1605	Samsung.....	4125, 2285, 2325, 2345
Koss.....	0215, 0725	.....	2485, 4095, 0075, 0255, 0565
KXD.....	0085, 2885	.....	1305, 1535, 1725, 2185, 2725
Lasonic.....	0855, 1295, 2825	.....	2995, 3085, 3555, 3765, 3865
Lenoxx.....	0235, 1345, 3515, 3525	Sansui.....	0015, 0695, 3495
LG.....	4285, 2335	Sanyo.....	2495, 0095, 0405, 2205, 2215
.....	2555, 2565, 2635, 0205, 0635	.....	2225, 2235, 2245, 2645, 3945
.....	1565, 2925, 3785, 3885, 3915	Sears.....	0015, 0445, 3495, 3745
Linn.....	1635, 2955	Seg.....	0765
Liquid Video.....	1335	Selectron.....	1855, 1885, 1915
Liteon.....	0805, 1035, 1495, 1575, 1905	.....	1955, 1995, 2035, 2075, 2875
Magnavox.....	2425, 4105, 0975	Semp.....	0725
.....	0105, 0295, 0445, 0735, 0745	Sensory Science.....	1495
.....	1045, 1055, 1225, 1395, 2945	Sharp.....	4115
.....	3025, 3715, 3745, 3795, 3815	.....	4315, 4325, 4335, 2315, 2445
Marantz.....	4105, 0205, 0735, 0745	.....	0555, 0625, 0815, 2795, 3115
.....	1395, 1615, 2945, 3795, 3885	Sherwood.....	4225, 0225
Maxent.....	1665, 1685, 3015	Shinco.....	1105, 3895
Medion.....	0435	Shinsonic.....	1105, 3895
.....	0455, 1035, 1325, 1665, 3755	Sonic Blue.....	0665
Memorex.....	2375	Sony.....	4165
.....	0435, 1925, 2755, 3125, 3495	.....	4275, 2305, 0365, 0535, 0715
Meridian.....	0735, 3795	.....	0725, 0895, 0905, 2165, 2865
Microsoft.....	0915, 3255	.....	2985, 3055, 3685, 3825, 3995
Microvision.....	1325	Soundstorm.....	1155, 1325
Mintek.....	1105, 3895	Sova.....	3545
Mitsubishi.....	2585, 1415, 3895	Spectroni.....	2575
Mustek.....	1275	Sungale.....	0675, 1715
Myron&Davis.....	1555	Superscan.....	0445, 3745
NAD.....	0205, 1625, 3295, 3885	Supersonic.....	0135
Nakamichi.....	1445	SV2000.....	0445, 3745
NEC.....	3885	SVA.....	0245, 0815
Nesa.....	1105, 1555, 3895	Sylvania.....	4215, 2405, 0445
Nexxtech.....	0125, 0145, 0335, 0515, 0725	.....	0795, 3745, 3815, 3855, 3875
.....	0955, 1025, 1545, 1755, 1765	Symphonic.....	0445
.....	1785, 1815, 1835, 2005, 2055	.....	0795, 0975, 3745, 3815, 3855
.....	2915, 3505, 3825, 3945, 3965	Tascam.....	0395
Norcent.....	0305, 0485, 0655, 0835, 1575	TCL.....	2435
Onkyo.....	2355	Teac.....	0025, 0955, 1245, 3885, 3945
.....	2505, 0355, 1435, 3795, 3985	Technics.....	1075
Optimus.....	0025, 1245, 2975	Techwood.....	1625, 1985, 2945, 3845
Orion.....	0015, 3495	Terapin.....	1705
Oritron.....	0215, 1935	Tevion.....	0435, 0605
Pacific.....	0435	.....	0725, 0785, 1125, 1295, 1465
Panasonic.....	4175	Theta Digital.....	0025, 1245
.....	2395, 2595, 2605, 0165, 0385	Tivo.....	0985, 1505
.....	0545, 0595, 1075, 1195, 1215	Toshiba.....	4145, 2295, 2475
.....	2965, 3105, 3775, 3975, 4005	.....	2545, 0015, 0115, 0735, 1735
Philco.....	3605	.....	1745, 2135, 2145, 2175, 2835
Philips.....	2415	.....	3065, 3075, 3325, 3495, 3795
.....	2615, 2625, 4105, 0745, 0105	Tredex.....	1355
.....	0265, 0445, 0735, 0795, 1045	Trutech.....	1385, 2045, 3655
.....	1055, 1225, 1395, 1615, 2665	United.....	0955, 3945
.....	2705, 2765, 2775, 2945, 3165	Venturer.....	0955, 3065, 3945
.....	3705, 3715, 3745, 3795, 3815	Vizio.....	4135, 4405
Philips Magnavox.....	4105, 0735, 0745	.....	4415, 4425, 4435, 4445, 2265
.....	1055, 1225, 1615, 2945, 3795	Westinghouse.....	2865
Pioneer.....	0025, 0525, 0705, 0875, 0985	Wharfedale.....	0575, 1455
.....	1245, 1595, 1775, 2675, 2695	White Westinghouse.....	0795, 3815

# Code List – Lista de Códigos

X-Box.....4245, 4255, 0915  
 Xenius.....0725  
 Yamaha.....4105, 0745, 1055, 1075  
 .....1095, 1225, 2785, 2945, 3005  
 Yamakawa .....0765, 0775, 1865  
 Zenith.....0205, 0635, 3785, 3795, 3885

## Blu-Ray-DVD

Denon .....4035  
 Dynex .....4235  
 HP.....4085  
 Insignia .....4205, 0975, 2635  
 JVC.....2385  
 LG.....4285, 2635, 2335  
 Magnavox.....2425  
 Memorex .....2375  
 Onkyo.....2355  
 Oppo.....4365, 4375, 4385, 4045  
 Panasonic .....4175, 2395  
 Philips.....2415  
 Pioneer .....4055  
 Samsung .....4125, 2325, 2345, 4095  
 Sharp .....4115, 2315  
 Sherwood .....4225, 4065  
 Sony .....4165, 4275, 2305  
 Sylvania .....4215, 2405  
 TCL.....2435  
 Toshiba .....2295  
 Vizio.....4135, 4025  
 Yamaha.....4075

## DVD-R

Apex .....0845  
 Aspire .....1695  
 Astar .....2885  
 Broksonic .....0695  
 Centrios .....1365, 1935, 1975  
 Coby .....2885  
 Cyberhome.....1015  
 Emerson .....1612  
 Funai.....0412  
 Go-Video .....1275, 1315, 1495  
 Hitachi .....0545, 0925  
 Humax .....1505  
 Ilo.....1035  
 Insignia .....0562  
 JVC.....1145, 2025  
 KXD .....2885  
 LG.....0562  
 Liteon.....0805, 1035, 1495  
 Magnavox.....1055, 1225, 3025  
 Medion.....1035, 1665  
 Memorex .....1925, 3125  
 Mustek.....1275  
 Oritron .....1935  
 Panasonic.....0545  
 Philips.....1055, 1225, 2705, 3165  
 Philips-Magnavox.....1055, 1225  
 Pioneer .....0985, 2695, 2855  
 Polaroid .....0185  
 RCA .....0915  
 Samsung .....1305, 4451  
 Sanyo .....0095  
 Selectron .....1955  
 Sharp .....0625  
 Sony .....2865, 2985, 3055  
 Sylvania .....1612, 1672  
 Symphonic .....1612  
 Toshiba .....0682, 1735, 3325  
 Trutech.....2045  
 Yamaha.....1055, 1225  
 Zenith.....0562

## DVD/VCR COMBOS

Allegro .....(3885 & 0182)  
 Apex .....0852, 1025  
 Broksonic .....0015, 0211, 0695  
 Cinevision .....(0205 & 0182)  
 Daewoo .....1385  
 Diamond Vision .....0422, 0455  
 Durabrand.....(0205 & 0182)  
 Emerson .....(0702 & 0312)

.....0412, 0432, 0445, 0795  
 Fisher.....(0405 & 0472)  
 Funai.....(0702 & 0312)  
 .....0412, 0432, 0445, 0795  
 Go-Video .....0255  
 .....0402, 0415, 0542, 0565, 1385  
 Hitachi .....(0925 & 0432)  
 Insignia .....(0205 & 0182), 0562  
 JVC .....0692, 0755, 1145, 2025  
 LG.....0562, 0635  
 Liteon.....1905  
 Magnavox.....(0105 & 1642)  
 .....0342, 0412, 0445, 1045  
 Medion.....0422, 0455  
 Nexxtech .....(0486 & 0492)  
 .....0852, 0955, 1025, 2055  
 Panasonic.....0552, 0595  
 Philips.....(0105 & 1642)  
 .....0342, 0412, 0445, 1045, 1372  
 Pioneer .....1775, 2695  
 Polaroid .....0852, 1025  
 RCA .....(0915 & 0162)  
 Rio .....(0205 & 0182)  
 Samsung .....0255, 1662, 1725  
 Sansui.....0015, 0211, 0695  
 Sanyo .....(0405 & 0472)  
 Sears .....0015, 0211  
 Sony .....0832  
 Sylvania .....(0702 & 0312)  
 .....(0702 & 1392), 0312, 0412  
 .....0432, 0445, 0795, 1612, 1672  
 Symphonic .....(0702 & 0312)  
 .....(1612 & 1392), 0312  
 .....0412, 0432, 0445, 0795, 0975  
 Techwood .....1602, 1985  
 Toshiba .....0115, 0682, 0735, 3075  
 Trutech.....1385  
 White Westinghouse.....(0795 & 0432)  
 Zenith.....(0205 & 0182)

## VCR

Accele.....0102  
 Admiral .....0302, 1682  
 Adventura .....0992  
 Aiko.....0082, 1092  
 Aiwa.....0182, 0312, 0432, 0752, 0992  
 Akai.....0312  
 .....1362, 0032, 0432, 0502, 0582  
 .....0712, 0872, 0982, 1212, 1592  
 Allegro .....0182  
 .....0452, 0792, 1182, 1732, 4201  
 American High .....1112  
 Apex .....0852  
 Asha.....0102  
 AT & T .....1272  
 Audio Dynamics .....0012, 0392, 0522, 0532  
 Audiovox.....0182  
 Beaumark .....0102  
 Bell & Howell .....0602, 1712  
 Broksonic .....0132, 0211  
 .....0322, 0442, 0462, 0572, 0695  
 .....0772, 0892, 0942, 1562, 1631  
 Calix.....0182  
 Candle .....0012  
 .....0022, 0102, 0182, 0882, 1082  
 Cannon.....0162, 0802, 1112  
 Canon .....0162, 1112, 1552  
 Capehart.....0792  
 Carver .....0482  
 CCE .....0082, 0362, 0372, 1092  
 Cine Vision.....0182, 1732  
 Citizen.....0012, 0022, 0082  
 .....0102, 0182, 0882, 1082, 1092  
 Colorlyme.....0012  
 Colt .....0362, 0372  
 Craig .....0102, 0182, 0362, 0372, 0592  
 Curtis Mathes .....0012, 0082  
 .....0102, 0162, 0312, 0432, 0482  
 .....0652, 0732, 1112, 1472, 1522  
 Cybernex .....0102  
 Daewoo .....0022, 0082, 0762, 0882, 0892  
 .....0992, 1082, 1092, 1385, 1472  
 DBX .....0012, 0392

# Code List – Lista de Códigos

Denon .....	0222	.....	0392, 0522, 0532, 0602, 0732
Diamond Vision .....	0422	.....	0772, 1012, 1122, 1212, 1712
Dimensia.....	0162	Nexxtech .....	0486, 0492, 0842, 0852, 2055
Durabrand.....	0182, 1732	Nikko .....	0182
Dynatech .....	0312, 0432, 0992	Noblex .....	0102
Electrohome .....	0032, 0182, 1592	Olympus .....	1112
Electrophonic .....	0182	Onkyo .....	1382
Emerson .....	0032, 0082, 0102, 0182, 0192	Optimus.....	0102, 0122, 0182, 0302, 0722
.....	0232, 0312, 0322, 0332, 0412	.....	1042, 1062, 1262, 1682, 1722
.....	0432, 0442, 0462, 0602, 0702	Optonica.....	0102, 0932
.....	0732, 0742, 0752, 0772, 0882	Orion.....	0322, 0942, 1562, 1631
.....	0892, 0912, 0922, 0942, 0952	Panasonic(National).....	0122, 0162, 0552, 1062
.....	0982, 0992, 1012, 1032, 1092	.....	1112, 1262, 1272, 1642, 1722
.....	1102, 1112, 1172, 1192, 1422	Pentax .....	0012, 0812, 1142
.....	1432, 1562, 1592, 1631, 1712	Philco.....	0162, 0172, 0482, 1112
Fisher.....	0012	Philips.....	1352, 1372, 0092, 0105
.....	0042, 0052, 0472, 0482, 0592	.....	0252, 0342, 0412, 0482, 0622
.....	0602, 1202, 1442, 1712, 2645	.....	0672, 1052, 1112, 1282, 1642
Fuji.....	0712, 1112	Philips Magnavox .....	0302, 0482, 0622, 1682
Funai.....	0312, 0412, 0432, 0702, 0992	Pilot .....	0182
Garrard .....	0992	Pioneer .....	0222, 0392
GE.....	0102, 0162, 0242, 0612	.....	0522, 0532, 0812, 1242, 2695
.....	1022, 1112, 1152, 1482, 1702	Polaroid .....	0852
Gold Star .....	0012, 0182	Portland .....	0022, 1082
.....	0312, 0432, 0792, 1181, 1632	Proscan .....	0162, 0642
Go Video.....	0102, 0255, 0272, 0292, 0402	Protec .....	0362, 0372
.....	0542, 0662, 1385, 1532, 1692	Pulsar .....	0792
Gradiente.....	0182, 0992	Quarter .....	0602, 1712
Harley-Davidson.....	0992	Quartz .....	0602, 1712
Harman/Kardon .....	0012, 0032, 1592	Quasar.....	0122, 0162
Harwood.....	0362, 0372	.....	1062, 1112, 1262, 1642, 1722
Headquarter .....	0432	Radio Shack .....	0032, 0042
.....	0512, 0602, 1142, 1212, 1712	.....	0102, 0162, 0182, 0302, 0312
HL-Q.....	0592	.....	0432, 0502, 0592, 0602, 0722
Hitachi .....	0312	.....	0932, 0992, 1042, 1112, 1152
.....	0512, 0812, 0925, 1142, 1212	.....	1262, 1482, 1592, 1682, 1712
Infinity.....	0622	Radix .....	0182
Insignia .....	0182, 0562, 1732	Randex .....	0182
Instant Replay.....	0312, 0432, 1112	RCA .....	0062, 0102, 0162
Inteq .....	0182	.....	0182, 0212, 0242, 0352, 0582
JC Penney .....	0012, 0102, 0162, 0182	.....	0612, 0642, 0782, 0812, 0915
.....	0392, 0522, 0532, 0602, 0812	.....	1022, 1112, 1132, 1142, 1152
.....	1112, 1142, 1212, 1242, 1712	.....	1222, 1452, 1482, 1572, 1702
JCL.....	1112	Realistic .....	0032, 0042, 0102, 0162
Jensen .....	0812, 1212	.....	0182, 0302, 0312, 0432, 0502
JVC.....	0012	.....	0592, 0602, 0932, 0992, 1042
.....	0392, 0452, 0522, 0532, 0602	.....	1112, 1262, 1592, 1682, 1712
.....	0692, 1212, 1712, 2025, 4201	ReplayTV .....	1272
Kenwood .....	0012, 0392	Ricoh .....	1252
.....	0522, 0532, 0602, 1212, 1712	Rio .....	0182, 0282, 1732
KLH.....	0362, 0372	Runco .....	0792
Kodak .....	0182, 1112	Samsung .....	0102
LG.....	0312, 0432, 0562, 0792, 1181	.....	0255, 0292, 0502, 0652, 0812
Liteon.....	1905	.....	0872, 0882, 1522, 1535, 1662
Lloyd.....	0312, 0432, 0992	Samtron .....	1692
Logik.....	0362, 0372	Sanky.....	0302, 0792, 1682
LXI .....	0182, 0312, 0432	Sansui.....	0132, 0211
Magnavox.....	0105	.....	0322, 0392, 0522, 0532, 0572
.....	0142, 0162, 0172, 0302, 0312	.....	0695, 0942, 1212, 1562, 1631
.....	0342, 0412, 0432, 0482, 0622	Sanyo .....	0052, 0102
.....	0792, 0862, 1112, 1642, 1682	.....	0472, 0592, 0602, 1072, 1322
Magnin.....	0102	.....	1332, 1342, 1442, 1712, 2645
Marantz.....	0012	Scott .....	0442, 0462, 0882
.....	0392, 0482, 0522, 0532, 0602	.....	0892, 0922, 1032, 1192, 1422
.....	0772, 0802, 1112, 1552, 1712	Sears .....	0042, 0132, 0182, 0211, 0412
Marta .....	0182	.....	0482, 0592, 0602, 0812, 1112
Matsushita.....	1112	.....	1142, 1202, 1242, 1262, 1712
Medion.....	0422	Sharp .....	0032
MEI .....	1112	.....	0302, 0312, 0332, 0432, 0932
Memorex .....	0052, 0102	.....	0962, 1042, 1082, 1592, 1682
.....	0182, 0302, 0312, 0432, 0482	Shintom .....	0362, 0372
.....	0502, 0592, 0602, 0792, 0942	.....	0522, 0712, 0812, 1252, 1512
.....	0992, 1112, 1631, 1682, 1712	Shogun .....	0102
MGA .....	0032, 0922, 1592	Signature .....	0312, 0432
MGN Technology.....	0102	Singer .....	0362, 0372, 1112
Midland.....	0612	Sonic Blue .....	1272
Minolta.....	0812, 1142	Sony .....	0072, 0112, 0262, 0382
Mitsubishi .....	0032, 0202, 0392, 0522	.....	0712, 0822, 0832, 0972, 1006
.....	0532, 0632, 0812, 0922, 1592	.....	1162, 1232, 1252, 1582, 1652
Montgomery Ward.....	1162, 0302, 0932	STS.....	0812, 1112, 1142
Motorola .....	1742, 0302, 1112, 1682	Superscan .....	0412
MTC.....	0102, 0312, 0432, 0992	Sylvania .....	0162, 0312
Multitech.....	0102, 0312	.....	0412, 0432, 0482, 0702, 0922
.....	0362, 0372, 0432, 0612, 0992	.....	0992, 1112, 1392, 1612, 1672
NEC .....	0012	Symphonic .....	0312, 0412

# Code List – Lista de Códigos

.....0432, 0702, 0992, 1392, 1612  
 Tandy .....0312, 0432, 0602, 1712  
 Tashiko .....0182  
 Tatung .....1212  
 Teac .....0312, 0432, 0992, 1212  
 Technics .....1112  
 Techwood .....1602  
 Teknika .....0182  
 .....0232, 0312, 0432, 0992, 1112  
 Tivo .....1052, 1162  
 TMK .....0102, 0732, 1012  
 Toshiba .....0042  
 .....0152, 0482, 0652, 0682, 0812  
 .....0882, 0902, 0922, 1002, 1032  
 .....1312, 1402, 1412, 1522, 3075  
 Totevision .....0102, 0182  
 Trutech .....1385  
 Unitech .....0102  
 Vector Research .....0012  
 .....0392, 0522, 0532, 0882  
 Victor .....0392, 0522, 0532  
 Video Concepts .....0012, 0032  
 .....0392, 0522, 0532, 0882, 1592  
 Videosonic .....0102  
 Wards .....0032, 0102, 0162, 0182, 0302  
 .....0312, 0362, 0372, 0432, 0592  
 .....0812, 0882, 0932, 0992, 1032  
 .....1112, 1142, 1462, 1592, 1682  
 White Westinghouse 0312, 0432, 0702, 0762  
 XR-1000 .....0362, 0372, 0992, 1112  
 Yamaha .....0012, 0392, 0522, 0532, 1212  
 Zenith .....0082, 0182, 0302, 0312  
 .....0332, 0392, 0432, 0452, 0512  
 .....0522, 0532, 0622, 0652, 0662  
 .....0712, 0762, 0792, 0942, 1072  
 .....1092, 1181, 1182, 1252, 1522  
 .....1532, 1631, 1682, 1732, 4201

## LASER DISC

Denon .....0222  
 Pioneer .....0222  
 Proscan .....0642  
 RCA .....0642  
 Sanyo .....1072  
 Sony .....1006, 1232  
 Zenith .....1072, 1232

## CD

ADC .....0517, 1277  
 Adcom .....0027, 0777  
 Aiwa .....0357, 0966, 0987, 1007  
 Akai .....0167, 0377, 0757  
 Audio Technica .....0117  
 California Audio Labs .....0257  
 Captronic .....0527, 1623  
 Carver .....0197, 0207, 0317, 0417  
 Casio .....0397  
 Centrios .....1097  
 Citizen .....0277  
 Coby .....1287  
 Curtis Mathes .....0397  
 Denon .....0637  
 Emerson .....0777, 1017  
 Fisher .....0127, 0217  
 .....0317, 0327, 0457, 1137, 1157  
 Genexxa .....0427, 0577, 1017  
 Goldstar .....0687  
 Harmon Kardon .....0647, 0797  
 Hitachi .....0427  
 Inkel .....0787  
 Insignia .....1526  
 JC Penny .....0397, 0657  
 JVC .....0897, 1056, 1107  
 Kenwood .....0137, 0367, 0467, 0497  
 .....0537, 1016, 1027, 1147, 1167  
 Krell .....0207  
 Kyocera .....0517, 1277  
 Luxman .....0227, 0337, 0477, 0587  
 LXI .....0397  
 Magnavox .....0207, 0737, 0837  
 Marantz .....0207, 0437, 0547, 0947  
 MCS .....0397, 0657

MGA .....0797  
 Mission .....0207  
 Mitsubishi .....0797, 0907  
 NAD .....0766, 0827, 1026, 1087  
 Nakamichi .....0007, 0877, 1037  
 NEC .....0657  
 Nexxtech .....0097, 0487, 0536  
 .....0576, 0607, 0617, 0666, 0727  
 .....0856, 0887, 0916, 0967, 1217  
 Nikko .....0117, 0217, 1017  
 NSM .....0207  
 Onkyo .....0147  
 .....0237, 0816, 0867, 0937, 1177  
 Optimus .....0057, 0317  
 .....0347, 0387, 0417, 0427, 0447  
 .....0537, 0557, 0667, 0776, 0857  
 Panasonic .....0257  
 .....0696, 0707, 0747, 0997, 1077  
 Philips .....0197, 0207, 0837  
 Pioneer .....0057, 0307, 0407, 0427  
 .....0577, 0717, 0807, 0917, 1227  
 Proton .....0207  
 Quasar .....0257  
 Radio Shack .....0107, 0247, 0267  
 .....0307, 0417, 0507, 0717, 1227  
 RCA .....0087, 0107  
 .....0187, 0307, 0317, 0717, 0777  
 .....1047, 1067, 1117, 1207, 1227  
 Realistic .....0317, 0347, 0427, 0527  
 .....0547, 0557, 0777, 1017, 1623  
 Rotel .....0207  
 SAE .....0207  
 Samsung .....0847, 1396  
 Sansui .....0017, 0047, 0207, 1067  
 Sanyo .....0157, 0177  
 .....0317, 0457, 0957, 1127, 1197  
 Scott .....0777, 1017  
 Sears .....0397, 0537, 0547  
 Sharp .....0537, 0547  
 Sherwood .....0247  
 .....0447, 0547, 0606, 0627, 0787  
 Shure .....0657  
 Sony .....0077, 0357, 0737, 0977  
 STS .....0517, 1277  
 Sylvania .....0207  
 Symphonic .....0567  
 Teac .....0217, 0297, 0547, 0557  
 .....0567, 0646, 0677, 0817, 1187  
 Technics .....0257, 0696, 0747, 0997, 1077  
 Theta Digital .....0837  
 Toshiba .....0766, 0827  
 Victor .....0897  
 Yamaha .....0037, 0117, 0287, 0927, 1057  
 Zenith .....0067, 0217, 0516  
 .....0597, 0656, 0697, 0716, 0767

## AUDIO

Aiwa .....0586  
 .....0726, 0846, 0966, 1296, 1386  
 Apex .....0425  
 Apple Ipod .....0186  
 Bose .....0886, 1237, 1606  
 Carver .....0197  
 Centrios .....1116, 1217, 1546, 1552, 1566  
 Citizen .....0277  
 Criterion .....0785  
 Delphi .....0376  
 Denon .....0316, 0976, 1046, 1136  
 Duraband .....1476  
 Fisher .....0026, 0826  
 Gold Star .....0216  
 Harman/Kardon .....0016, 0436  
 Insignia .....0725  
 Ipod .....0066  
 JVC .....0566, 0676, 1056  
 JWL .....1126  
 Kenwood .....0246, 0426, 0497  
 .....0616, 0956, 1016, 1416, 1596  
 Koda .....1552  
 Koss .....0215  
 Magnavox .....0026, 0206, 0226, 0295, 1266  
 Marantz .....0036, 0437  
 Mitsubishi .....0366

# Code List – Lista de Códigos

NAD .....0496, 0766, 1026  
 Nelson .....1217  
 NEO .....0076  
 Nexxtech .....0487, 0536, 0576, 0666  
 .....0725, 0856, 0916, 1116, 1217  
 Norcent.....0835  
 Onkyo .....1186, 1246, 1256  
 .....0116, 0816, 0936, 0996, 1376  
 Optimus.....0006, 0317, 0386, 0387, 0506  
 .....0776, 0896, 1036, 1446, 1486  
 Panasonic.....1206, 1236, 0056  
 .....0126, 0686, 0746, 0796, 0876  
 .....1066, 1096, 1346, 1436, 1466  
 Philips.....1196, 0026, 0036  
 .....0197, 0265, 1066, 1266, 1576  
 Pioneer .....0266, 0356  
 .....0407, 0476, 0776, 0896, 1106  
 .....1406, 1446, 1496, 1506, 2675  
 Radio Shack .....0006  
 .....0166, 0176, 0236, 0247, 0266  
 .....0356, 0476, 0507, 0626, 1036  
 .....1316, 1406, 1446, 1486, 1506  
 RCA .....0146, 0176, 0196, 0266, 0276  
 .....0326, 0356, 0476, 0486, 0626  
 .....0736, 0786, 0866, 0906, 0986  
 .....1165, 1207, 1276, 1286, 1306  
 .....1316, 1326, 1336, 1406, 1506  
 Realistic .....0946  
 Regent .....1476  
 Rio .....3885, 0286  
 Saba .....0995  
 Samsung .....0075  
 Sanyo .....0157, 1156, 1166, 1176  
 Scott .....0396  
 Sharp .....1616  
 .....1626, 1216, 0556, 0756, 1267  
 Sherwood .....0236, 0247, 0466, 0606  
 Sirius.....1247, 1267  
 Skyfi.....0076  
 Sony .....1226, 0046  
 .....0106, 0136, 0256, 0296, 0406  
 .....0416, 0526, 0546, 0636, 1006  
 .....1076, 1086, 1426, 1456, 1586  
 TAO .....0076  
 Teac .....0156, 0297, 0306, 0346, 0646  
 Technics.....0056, 0126, 0686  
 .....0696, 0796, 1066, 1096, 1436  
 Tevion .....0785  
 Venturer .....0086  
 Vizio .....1636, 1646  
 Wonder .....1566  
 XM Radio.....0076, 0376  
 Yamaha.....0076, 0287  
 .....0336, 0446, 0456, 0596, 0706  
 .....0806, 0836, 0926, 1146, 1536  
 Zenith.....3885  
 .....0026, 0067, 0096, 0216, 0217  
 .....0286, 0506, 0516, 0656, 0716

Apex .....0425  
 Bose .....4455, 0886, 1475  
 Boston Acoustic.....3245  
 Centrios .....0486, 0955, 1116, 1785, 1845  
 Classic.....1965  
 Criterion.....0785  
 Durabrand.....3885, 0205  
 .....0486, 0955, 1476, 2685, 2935  
 Dynex .....0038  
 Emerson .....1185  
 Insignia .....0725  
 JVC .....0155  
 KLH.....0465  
 Koss.....0215  
 Lenoxx.....1345  
 LG .....4285, 1463, 1565  
 Magnavox.....(0105 & 1266), (2945 & 1266)  
 .....0206, 0295, 0745, 1045  
 Myron & Davis .....1555  
 NESA .....1555  
 Nexxtech .....0486, 0725, 0955, 1116, 1785  
 Norcent.....0835  
 Onkyo .....0048, 0058, 0355, 1376  
 Panasonic.....0165, 1466  
 Philips.....(0105 & 1266)  
 .....(2665 & 1266), (2945 & 1576)  
 .....0206, 0265, 1045, 2765  
 Pioneer .....(2675 & 1496), 0525, 0875, 2895  
 Radio Shack .....(0003 & 1316)  
 .....0085, 0275, 0486  
 .....0626, 0955, 0995, 1165, 1645  
 RCA .....(0003 & 1316)  
 .....0486, 0626, 0955, 1165, 1645  
 Regent.....1345, 1476  
 Rio .....(0205 & 0286)  
 Saba .....0995  
 Samsung .....0075, 1535, 2725  
 Selectron .....1885, 2075  
 Sony .....0365, 1426  
 Techwood .....1602, 1985  
 Tevion .....0785  
 Zenith.....(0205 & 0286)

## TV/VCR/DVD COMBO

Broksonic .....1525  
 Diamond Vision .....(2001 & 0422), 0455  
 Magnavox.....0445, 0412  
 Panasonic.....0595, 0552  
 Philips.....0445, 0412  
 Samsung .....1535  
 Sears .....0445, 0412  
 Superscan .....0445, 0412  
 Sylvania .....0445, 0412  
 Toshiba.....0115, 3075

## HOME AUTOMATION

GE Homeminder.....0008  
 Lutron .....1516  
 X10 Home Automation .....0018  
 X10 NEC.....0028  
 Vizio .....0068

## MEDIA CENTER PC

MCE.....3255  
 Microsoft .....3255  
 Vista.....3255

## HTIB

### (HOME THEATER IN A BOX)

Aiwa.....(0586 & 0035)  
 Amw .....0825

Model:  
 ONB13AV0047252  
 Manual Version 1  
 Updated: 03/28/14